


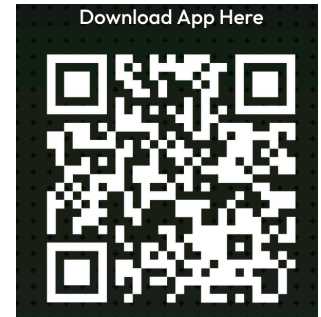

LiFeBlue Ultimus App Air Connection Guide

The Ultimus App supports networking data from up to 4 LiFeBlue batteries using the Air connection feature. Works with all LiFeBlue models.

1. Download the Ultimus using the QR code. The App is also available on the IOS App Store or Play Store.
2. Open the App and select "Air connection".
3. Press the Plus button in the top left to create a new network. You can create 2 separate networks for up to 8 batteries.
4. Select "System Name". Press "Enter system name" and enter the name you chose.
5. Press Done and Confirm.
6. Select "Configuration". At the bottom of the screen, select Parallel for a 12V system or Series for 24, 36 or 48 Volts.
7. Press Confirm.
8. Select "Device Number".
9. At the bottom of screen select number of batteries you have. (2,3 or 4)
10. Press confirm.
11. Press Next step at page bottom.
12. Select your battery from the list showing. It will populate to the first green cell at the top of the page. Press the plus button in the next gray cell. It turns green.
13. Select your next battery from the list. Repeat this process for 3 or 4 batteries.
14. When done, press Save at the bottom of the page. The new network page will open displaying combined data from all networked batteries.



That's it! Next time you open the App, choose Air connect and select the configuration you want to view. View all your data on one screen.

Need support? Call or email us.
920-543-3764 sales@lifebluebattery.com